




POWERGEAR RECESSED TRACK MOUNTING INSTRUCTIONS


Important


This installation must be performed by a professional installer. Power must be switched off before performing any operation or manipulation. This material is only for indoor application.

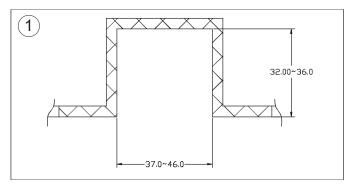

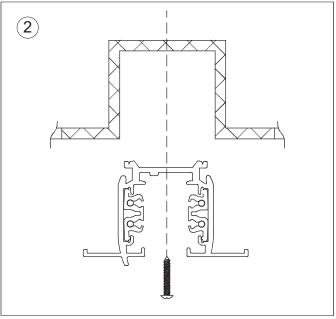

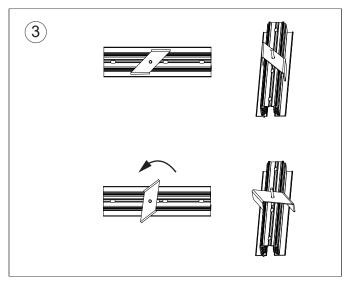

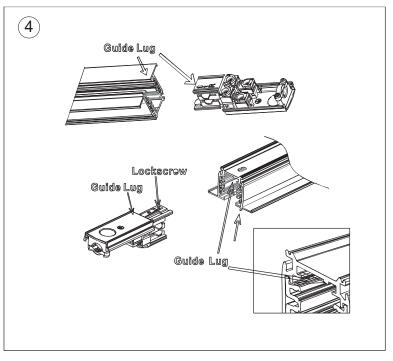

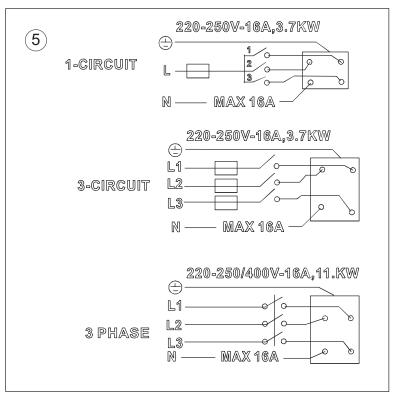

PRO-RX431 PRO-RX434 PRO-RX435 PRO-RX436 PRO-RX437