
User Manual

LED Ceiling recessed spotlight fire V2 ww+nw+cw
Model no. 157400

Installation procedure

- 1. Prepare the hole according to cut out size Given (65 70mm).
- 2. Remove the cover on the quick connection and connect the mains cable as marked (L E N).
- 3. Put back the cover and secure it using the screws provided.
- 4. Hold both springs upwards against the heat sink and push the light fitting through the hole. Release the springs slowly, springs will hold the light fitting in the ceiling.
- 5. Switch on the supply to complete the installation.

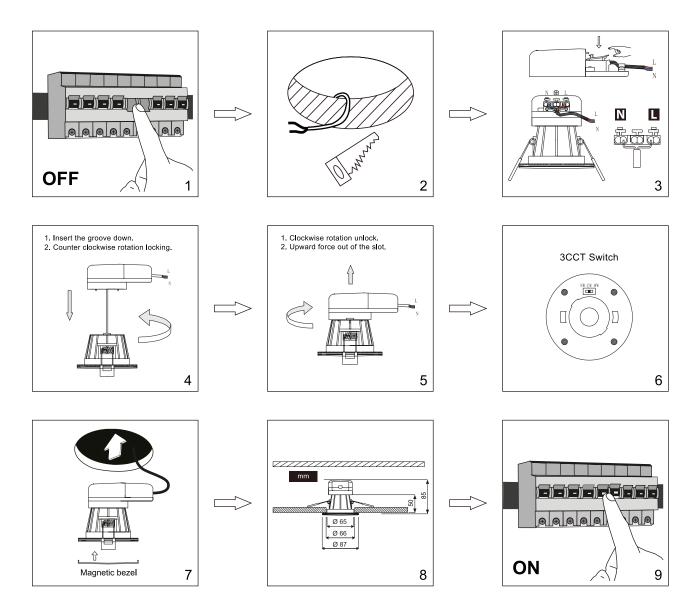

Hygiene & safety

We advise to use the sft cloth to clean up and do not attempt to use any chemical agent in order to avoid any damages from the surface. For your safety, please cut off the supply before changing or cleaning the lamp source.

Caution

- Installation must be done by professional electrician or competent person.
- Before commence the installation please make sure you have correct voltage present as stated.
- Please carry out safety isolation procedure before commencing the installation.
- Please make sure correct size of circuit protection device (fuse/circuit breaker) installed according to number of light fittings in the circuit.
- The defective light fitting / driver should not be treated as the normal waste and should be returned to supplier or disposed appropriately according to local authority guidelines.





