

User Manual

PP8S





1.Table of Contents

1.Table of Contents	
2.Your PP8S at a glance	
2.1.Key Features	
3.Safety	
3.1.Signal word panel	
3.2.Safety alert symbol	
3.3.Pictograms	
3.4.Product modification	
3.5.Power supply	
3.6.Storage and Installation	
4.Getting Started	
4.1.What's Included	7
4.2.Connecting to the mains	7
4.3.Connecting to Host	7
4.4.Previous versions of Windows	7
4.5.Registration	7
4.6.Help and Support	8
5.Using your PP8S	9
5.1.Using without connecting to a host computer	9
5.2.Using when connected to a host computer	9
5.2.1 Charging	9
5.3.Data Transfer	9
5.4.Scalability	11
5.5.Manage Ports & Your PP8S	. 12
5.5.1 Port Modes	. 12
5.5.2 Charging Profiles	12
5.6.Software	. 13
5.6.1 LiveViewer	. 13
5.6.2 Cambrionix API	. 13
5.6.3 Updating Software	14
5.6.4 Firmware	. 15
5.6.5 Command Line Instructions (CLI)	. 16
5.7.Cleaning your PP8S	
6.Product Specifications	
6.1.Input Power Requirements	
6.2.Output Power	. 19
6.3.Physical specifications	
6.4.Power Supply	
7.Compliance and Standards	




2.Your PP8S at a glance

The PP8S has been designed primarily for desktop use, being highly compact and quiet. It provides 10W of charging power to each of its 8 x USB 2.0 Type-A ports, allowing mobile devices to be charged quickly, safely and reliably. All ports can be controlled using Cambrionix software to allow charging and/or data transfer while monitoring important port and device information.

The PP8S can charge attached USB devices without using a local computer and our intelligent charging algorithm allows almost any device to be charged at its optimum rate (up to 2.1A). The firmware can be up-dated to allow new charging profiles to be added, ensuring the PP8S can charge the latest devices. It is ready to charge out-of-the-box and to sync devices when attached to a host computer.

When a local (host) computer is attached, the host can control operation of the ports using freely available software. Device charging and synchronisation can be monitored through Cambrionix's LiveViewer App, the Application Programming Interface (API) or Command Line Interface (CLI). Cambrionix's free monitoring and control software can be downloaded from www.cambrionix.com/software

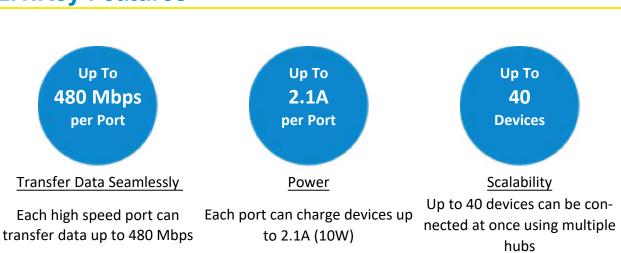

2.1.Key Features



3.Safety

This user manual is for informational purposes only, it contains information for start-up and operation of this product. Note: the contents and the product described are subject to change without notice. To avoid injuries and damage observe the safety instructions of the user manual.

Understanding and observing the instructions in this user manual are prerequisites for hazard-free use and safety during operation. This user manual cannot cover all conceivable applications. If you would like additional information or if problems arise that are not sufficiently addressed in this manual please ask your distributor or contact us directly using the means preferred which are located on the back cover of this manual.



3.1.Signal word panel

Depending on the probability of serious consequences, potential dangers are identified with a signal word, the corresponding safety colour, and if appropriate, the safety alert symbol.

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor (reversible) injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in damage to the product and/ or its functions or of a property in its proximity.



3.2.Safety alert symbol



Use of the safety alert symbol indicates a risk of injury.

Observe all measures that are marked with the safety alert symbol in order to avoid injury

3.3.Pictograms

Warning Signs		
4		
Electrical hazard	Fire Hazard	
Mandatory	action signs	
Read operating instructions	Mandatory regulation	


3.4.Product modification

Cambrionix products are designed and manufactured to meet the requirements of UK and International safety regulations. Modifications to the product could affect safety and render the product non-compliant to relevant safety standards, which could result in injury or damage to the product.

4	Electric shock or personal injury may occur
	 Do not modify the product in any way Do not dismantle the product



•	
	Fire or personal injury may occur
	 Do not obstruct air vents on the product
	 Do not cover the product in combustible material

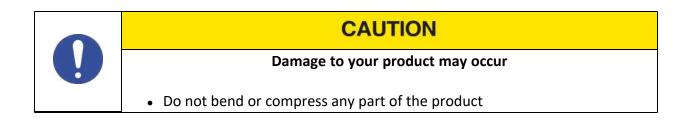

3.5. Power supply

This section describes safety precautions you must follow when using the power supply.

4	Electric shock or personal injury may occur
	 Do not use a damaged power cord or plug, or a loose power socket Do not touch the power plug with wet hands
	Do not allow liquids to come into contact with the unit or power supply

	CAUTION
0	 Damage to your product may occur Do not short circuit the Power Supply Unit (PSU) supplied with your
	productDo not disconnect the power cord while the product is being usedDo not bend or pull the power cord with excessive force




3.6.Storage and Installation

This section describes safety precautions you must follow when installing and storing your PP8S.

4	Electric shock or personal injury may occur
	Do not place the power cord near heat sourcesConnect the plug to an earthed socket

	CAUTION
	Damage to your Cambrionix product may occur
Ų	 Operate the product only in an environment where the ambient temperature is inside the operating temperature range Operate the product only in an environment where the relative humidity is inside the operating range
	 Be careful not to leave the power cord underneath a heavy object

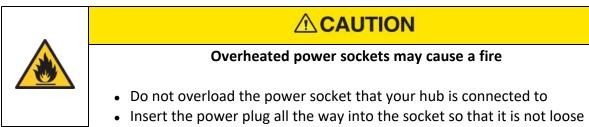



4.Getting Started

4.1.What's Included

- 2m Mains power cable (Country specified on order)
- 0.8m USB 2.0 Type-A Updater Cable
- PP8S Hub
- Power Supply Unit

4.2.Connecting to the mains

Connect the Power Supply Unit (PSU) to the hub using the 4-Pin DIN plug. Connect the power cable to the PSU. Making sure you adhere to local safety regulations, connect the power cable to the 100 – 250 VAC mains power outlet and switch the hub on using the small power switch located on the opposite side to the power input connector on the hub. When the device is switched on, a green LED will be illuminated. The hub is now ready to charge attached devices.

4.3.Connecting to Host

Once the power is connected connect the PP8S to your host system using a USB 2.0 Type-A cable, this is provided with your hub. Using an incorrect host cable may result in the hub and all subsequent ports not being recognised by your host.

4.4. Previous versions of Windows

If you are using a version of Microsoft Windows[™] prior to Microsoft Windows 10[™] you will need to install Cambrionix CDC drivers for enabling the full functionality of the hub. To install the drivers please detach the hub from the PC before executing the downloaded installer. Once the installer has completed the installation of the drivers you may attach your hub. Download the file at: www.cambrionix.com/software-archive

4.5.Registration

You may register your product at <u>www.cambrionix.com</u>



4.6.Help and Support

FAQs and help can be found on the Help page here

• <a>www.cambrionix.com/help_pages/help.

You can raise a support ticket for more in depth support here

• www.cambrionix.atlassian.net/servicedesk/customer/portals

You can also download any of our manuals and keep up to date at the link here

• www.cambrionix.com/product-user-manuals



5.Using your PP8S

In this section you can find information information on how to use your hub in a charge only or a charge and sync application. You can also find information on managing your hub and changing port modes, connecting multiple hubs to one host and using Cambrionix Software.

5.1.Using without connecting to a host computer

When the Hub is switched on and is not connected to a local host computer it is automatically configured to charge devices using its intelligent charging algorithm. Simply connect the devices to be charged to any of the available ports (not the Host Port) using USB - compliant cables.

Once the devices are connected, the algorithm will detect the highest charge rate allowable for each attached device. Charging at the optimum rate (up to 2.1A) specified by the manufacturer will commence once profiling is complete. Depending on the state of charge of the device attached, this may take tens of seconds.

5.2.Using when connected to a host computer

5.2.1 Charging

When the Host Port is connected to a local computer, the hub defaults to Sync mode and charge currents are determined according to USB Implementers Forum (USBIF) Super-Speed USB3.0 specifications. If the attached device complies with USB-IF Battery Charging specification BC1.2 and supports Charging Downstream Port (CDP), the hub can provide high-speed charging at up to 2.1A. If the connected device does not comply with BC1.2, the charge current will be limited to 500 mA in compliance with USB specifications.

5.3.Data Transfer

If you wish to transfer data, change applications, restore or update your mobile device, a data connection to a local host computer is required. The hub works independently to the Operating System (OS) and data transfer can be performed to all common mobile operating systems, such as iOS[™], Android[™], Chromebook[™] and Microsoft Windows[™]. In order to transfer data, connect



the host port to your local (host) computer using a Type-A to Type-A USB2.0 (or higher) compliant cable. Any devices connected to the hub will now appear as if they were connected to the host computer's USB port. The hub is fully compliant with High Speed USB2.0 and supports data transfer at speeds up to 480Mbps. The red power LED may flicker when the hub is syncing.

You can now use the programme of your choice to transfer data to and from your device. Please note that USB specifications require a minimum 100 mA charge current to be delivered during data transfer. As indicated in above, if the attached device has a BC1.2 compliant CDP port, the device can draw up to 2.1A while transferring data.




5.4.Scalability

If you wish to synchronise more devices, multiple hubs can be connected together to allow more devices to be managed from a single host computer simultaneously.

In order to daisy-chain multiple hubs, each hub needs to be connected to mains power individually and the first hub in the chain should be connected to the local computer through the hubs' "host port". The Host port of the next hub in the daisychain is then connected to any of the first hubs downstream USB ports. More hubs are added in the same way. way.

Using this daisy-chain approach, a maximum of four additional hubs can be linked, allowing a total of 40 devices to be synced from a single host computer. Alternatively, a star topology can be used. In this arrangement, the first hub is attached in the same way, connecting the hubs host port to the computer's USB port. Thereafter, five additional hubs can be attached to the downstream USB ports of the first hubs by their host ports as shown below.

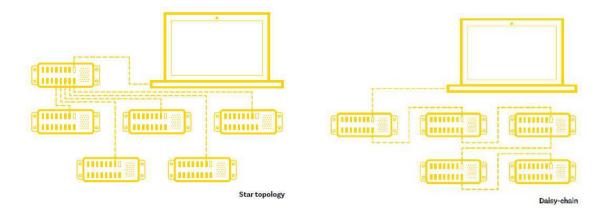



5.5. Manage Ports & Your PP8S

Each port on your PP8S can be managed either individually or all together. You can turn the ports off and on, change the port mode or change the charging profiles. This can be done either through LiveViewer or by connecting to the hub via the API.

5.5.1 Port Modes

Charge	Turn specific ports or the whole hub to charge only mode
Sync	Turn specific ports or the whole hub to sync mode
Biassed	Detect the presence of a device but it will not sync or charge it.
Off	Turn specific ports on or off or switch the whole hub on or off.

5.5.2 Charging Profiles

To ensure attached devices charge at their optimum rate, our smart USB hubs come with the below intelligent charging profiles built in:

0	Intelligent charging algorithm which will select a profile 1-6
1	2.1A
2	BC1.2 Standard
3	Samsung
4	2.1A (Profile 1 but with a longer timeout)
5	1.0A
6	2.4A



5.6.Software

More productivity, saving you time. Cambrionix provides three interfaces by which the Hub can be monitored and managed:

- LiveViewer
- Cambrionix API
- Command Line Instructions

5.6.1 LiveViewer

LiveViewer is an Application that can be downloaded from <u>www.cambrionix.com/products/liveviewer</u>. Once downloaded and installed on the host computer, LiveViewer allows you to switch the ports on and off, set the port to charge only, or to sync mode. LiveViewer's home page shows the following information about all the ports:

- Status (attached/disconnected)
- Mode (Charge/Sync/Off)
- Profile (Charging profile)
- Duration (how long the device has been attached)
- End time (time the battery reaches a threshold (full) level)
- Current (instantaneous charge current in mA)
- Energy (present energy rate)

Tick boxes adjacent to each port symbol allow that port mode to be changed. When the port is in Sync mode, only instantaneous current can be monitored through LiveViewer. When the port is in Charge mode, the charge profile, instantaneous current, energy rate, duration of charge and end time are displayed. In addition to individual port information and control, LiveViewer displays the hub rail voltages, time since switched on, total instantaneous current and power, and temperature. Further information on LiveViewer is available on our website.

5.6.2 Cambrionix API

Cambrionix API allows you to monitor and control each port in more detail and to integrate these functions into your own workflow processes. The API comprises a daemon that can be downloaded from www.cambrionix.com/products/api and installed on the host machine. Port information and control can be provided through the API using JavaScript Object Notation (JSON) Remote Procedure Calls (RPC) over TCP. JSON-RPC calls send a request to the API to "Get" port, device or Hub information, or "Set" port functions (such as mode). A library of



sample Python code can be obtained from <u>www.cambrionix.com/products/api</u> to help you integrate many of these functions into your process workflow alongside the full User Guide.

5.6.3 Updating Software

By using LiveViewer you will be able to automatically download and install the most up to date software (LiveViewer and the Cambrionix API)

By going into the settings section on the left hand side of LiveViewer you can navigate to the general tab and under this can see the options for keeping both LiveViewer and the API up to date.

API: Update downloaded Installed 219-5-5 Theme Selection	Charles Contraction of a start Charles Contraction of a start of a start Charles Contraction of a start Charles Contraction of a start Charles Contraction of a start of	Remember previous page on start-up	NURE RFID NURAM TEMPLATES
LiveViewer: Update downloading SM M0/see SM M0/see Maisbel SM M0/see SM M0/see SM M0/see Maisbel SM M0/see SM M0/see	LiveViewor: Update downloading SNAMp/coc SNAMp/coc Installed 200-0 Aprilophic downloaded installed 200-0 Theme Selection	O Check at program start Scheduled	Live/lever Release - API Release -
Installed Available 238.54 RELEASE NOTES INSTALLS	Installed Available ELEASE NOTES INSTALL NO 219 5 6 Theme Selection	LiveViewer: Update downloading 514 M8/see Installed 2010-0	
Cambrionix Red Orange Teal Green Purple Dark		Installed 270 S to 5 Theme Selection	2814 RELEASE NOTES RESIDENCE

You can select when you would like the automatic software checks to take place or if you prefer can change to a manual update selection. You can also select which version of the software you would like to use between the options of Alpha, Beta or Release.

When you have some software updates available you can select install now to begin the installation process, a progress bar will appear to show the installation status. From this bar you can also view the release notes for the version of the software you are looking at.



5.6.4 Firmware

The firmware can be kept up to date using our LiveViewer software. As part of delivering an easy user experience our LiveViewer application is now a set-and-forget solution. The LiveViewer application will find out what firmware your USB hub has and present an update for you, ready to just hit install.

To update the firmware first go to the firmware updater section of LiveViewer. Here you can see the available Firmware versions available to download and install to the hub. To download a firmware file click on the version under the "downloadable firmware updates" section. once downloaded it will appear in the "Available firmware files" section.

The current firmware version on the hub is displayed in the firmware updater section alongside the hubs name. This will appear red if a newer version is available or green if it is the most up to date.

A Home / Firmware		
DECATE ALL DECATE FIRMWARE No firmware has been selected No targets have been selected		
No hubs have been detected Hubs that can be updated will appear here when they are connected to the heat computer		
Available firmware files		ADD REMOVE
Filename	Display	Motor Firmwa
Cambrionh/Firmware-v1.85-un		1.6
Cambriont/Firmware-v1.84-un		1.8
Cambrion&Firmware-v1.83-un		1.0
Downloadable firmware updates		
Flename	Size	
CambrionixFirmware-v0.30-ps	123598	NOTE
CambrionixFirmware-v1.7%-un	94336	NOTE
CambrionixFirmware-v1.83-un	98473	NOTE
CambrionxFirmware-v1.84-un	100197	NOTE
CambrionixFirmware-v1.85-un	100764	NOTE

To install the firmware onto the hub simply click the hub/ hubs connected that you want to update and then select the firmware version you want to upgrade to. Once selected press the update button at the top and the update will commence.

CAUTION
Your Cambrionix Firmware may get corrupted
 Do not interrupt the Firmware update process Do not disconnect the power during the update process



5.6.5 Command Line Instructions (CLI)

Command Line Instructions can also be used to control and monitor the functions of the hub and attached devices over a VCP (Virtual COM Port). In order to use the command line interface a serial terminal emulator must be installed on the host computer. Examples include Serial, ZTerm, PuTTy, and Minicom. If you would like more information please look at our more in depth information here www.cambrionix.com/cli

Once you have installed your preferred terminal emulator, please connect to the hub's COM port using 115,200 baud, 8 data bits, No Parity, 1 Stop Bit. Once you get a command prompt, type "help" for a list of commands and their usage, as shown below:

Command	Action
mode <m> [p]</m>	Set mode <m> for port [p] or all ports</m>
mode c [cp]	Set charge mode for a port p
state [p]	Show state for port [p] or all ports
system	Show hardware and firmware information
health	Show voltages, temperatures, errors and boot flag
cef	Clear error flags
sef [flags]	Set error flags. One of: 5UV 50V 12UV 120V
crf	Clear rebooted flag
limits	Show voltage and temperature limits
power [pwr [p]]	Show power totals or set board max to [pwr], or just port [p] in mW
host [auto manual]	Show if USB host is present, and set mode change
id	Show id string
logp <s></s>	Report mA for each port every <s> seconds</s>
loge <s></s>	Report events and state for all ports every <s> seconds</s>
	Live view (periodically updated screen showing system state)
remote [exit kexit auto]	Enter or exit mode where console is controlled by terminal
ledb <row> <ptn></ptn></row>	Set individual LED on row <row>, port to flash bit pattern <ptn></ptn></row>
leds <row> [ptnstr]</row>	Set flash patternof a string of LEDs on row <row> to string <ptnstr></ptnstr></row>



Command	Action
led <colour> [ptnstr]</colour>	Set LED on port to colour (name or hex)
cls	Clear terminal screen
reboot [watchdog]	Reboot (optionally by using watchdog timeout)
hast [auto/off	Show if USB host is present, and set mode
host [auto/off	change

Notes	
[p] is port number	Range 116. Omit for 'all'
<m> is port mode</m>	c=Charge, s=Sync, o=Off, b=Biassed
Parameters	Optional parameters are shown in [] Com- pulsory in < >
Tab key	Re-runs previous command

Examples	
mode c 3	Set port 3 to charge mode
mode o	Turn off all ports
state 2	Reveal state of port 2
state	Reveal state of all ports



5.7.Cleaning your PP8S

Cleaning the product is generally not required, although in some instances it may be necessary if excess dirt/ dust/ hair has accumulated, or if minor liquid spillages have occurred on the module during operation or storage.

	Electric shock or personal injury may occur
<u> </u>	 If there is a dirt/ spillage over a ventilation slot, external data/ power connector or product aperture, please remove power from the unit without touching the liquid and contact Cambrionix immediately

- Ensure that the product is switched off and the power cord is removed from the product. Hold the power cable by the plug and do not touch either the plug or the power cord with wet or damp hands as an electrical shock may result
- Wipe the product with a clean, dry and soft cloth. Do not use detergents which contain alcohol, solvent or surface-active agents. Do not spray water or detergent directly onto the product
- Wet a soft and dry cloth in water and wring thoroughly to clean the product as required
- Dry the product thoroughly once the cleaning has finished
- Reconnect the power cord and use your product as advised once cleaning and drying is complete



6.Product Specifications

6.1.Input Power Requirements

Input Voltage	12Vdc
Input Current	15A
Input Connection	4-Pin DIN


6.2.Output Power

Output Voltage	5.0V +/-5%
Output Current (Max per Port)	2.1A
Output Power (Max per Port)	10W
Output Power (Total)	87.36W

6.3.Physical specifications

Input Connectors	USB 2.0 Type-A
Output Connectors	8 x USB 2.0 Type-A
Maximum Data Speed	480 Mbps
Ambient Operating Temperature range	0-35 °C
Relative humidity	5% to 95% non-condensing
Dimensions	198.4 x 73 x 40mm
Weight	1.6kg



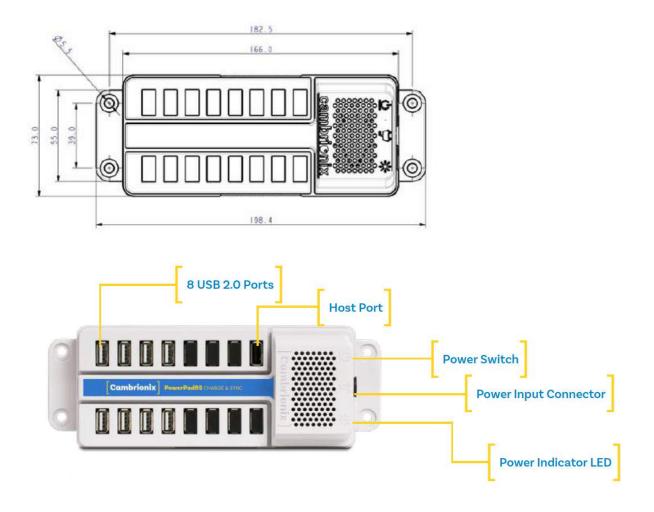

6.4. Power Supply

Input Voltage	100-240VAC
Input Current (Typical)	4A @ 115VAC
	2A @ 230VAC
Input Frequency	50-60Hz
Input Connector	C14
Output Voltage	12V
Output Current	15A
Output Power (Max)	180W
Output Connector	4-pin DIN



7. Compliance and Standards

- CB Certificate
- CE Tested and marked
- China CCC Certification
- FCC Part 15 Tested and marked
- Housed within a UL94-VO specification fire enclosure
- Japanese PSE certification (pending)
- RoHS Compliant
- Independently safety tested by the Underwriters Laboratory (UL) under file #E346549



Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and /or symbols of third-party companies not related in any way to Cambrionix. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by Cambrionix, or an endorsement of the product(s) to which this manual applies by the third-party company in question.

Cambrionix hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and /or symbols contained in this manual and related documents are the property of their respective holders

"Android™ is a trademark of Google LLC"

"Chromebook™ is a trademark of Google LLC."

"iOS[™] is a trademark or registered trademark of Cisco in the US and other countries and is used under license."

"Linux[®] is the registered trademark of Linus Torvalds in the U.S. and other countries" " Microsoft™ and Microsoft Windows™ are trademarks of the Microsoft group of companies."



Cambrionix Ltd The Maurice Wilkes Building Cowley Road Cambridge CB4 0DS United Kingdom

+44 (0) 1223 755 520 enquiries@cambrionix.com www.cambrionix.com

08/2021 © 2021 Cambrionix Ltd. All rights reserved.